

- Note 1: DPS265 must be set to RS232, 9600 baud, as per Remote Control section of DPS265 Operators Manual Set TC400D to DPS265
- Note 2: DPS275 must be set to RS232, 9600 baud, as per *Remote Control* section of DPS275 *Operators Manual* Set TC400D to DPS275
- Note 3 DPS295 must be set to RS232, 9600 baud, Address 0 as per *Remote Control* section of DPS295 *Operators Manual* Set TC400D to DPS295

Note 4: Sync phase, SC phase and Freeze are also controlled.

