

CAT-CV GPI Pinout

1/14/99

used with software version 0.9.5.42 or higher

See Cat CV manual for complete details on using the GPI interface

Use this new pinout instead of the one on page 13.

1	GPI IN	Toggles Buffer 1 Freeze
2	GPI IN	Toggles Buffer 2 Freeze
3	GPI IN	Toggles Buffer 3 Freeze
4	GPI IN	Toggles Buffer 4 Freeze
5	GPI IN	CUT button
6	GPI IN	BKGD Mix
7	GPI IN	KEY Mix
8	GPI IN	BKGD and KEY Mix
9	GPI OUT	Input 1 is ON AIR
10	GPI OUT	Input 2 is ON AIR
11	GPI OUT	Input 3 is ON AIR
12	GPI OUT	Input 4 is ON AIR
13	GPI OUT	KEY is ON
14	GPI OUT	
15	GND	

ON AIR is defined by being visible on the program out either during a dissolve/wipe or as part of a key.